PROCEDURE

1. Place the test tubes containing reagent R1 in one of the incubation cells and let them warm for at least 10 minutes.

2. Warm up the palm oil sample at approx. 60-70 °C before withdrawal.

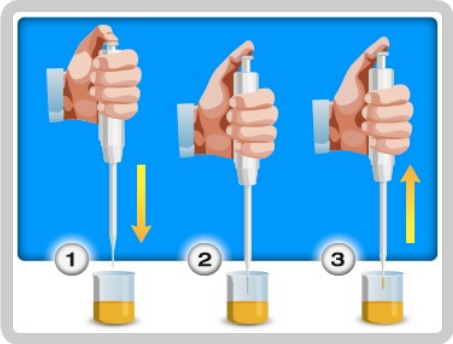

3. Withdraw the sample with the pipette 2-3 times and release it on blotting paper before collecting it for the test. Then collect 20 µL of sample.

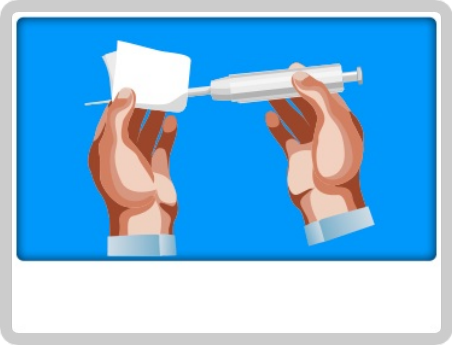

4. Carefully clean the outside of the pipette tip with blotting paper, avoiding contact between the extremity of the tip and the paper.

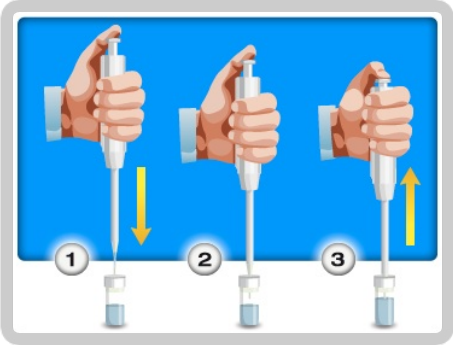

5. Place the sample in the cuvette. Keeping the tip immersed in reagent, press and release the piston of the pipette several times.

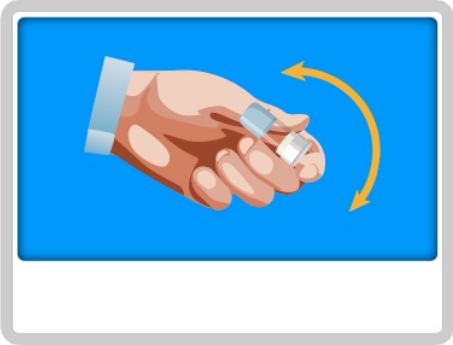

6. Gently shake the cuvette 2-3 times.

7. Place the cuvette in the cell marked with the blue light, within 30 seconds of the addition of sample and press READ to perform the photometric reading that will last approximately 1 minute.